



Soap Dispenser Maintenance Instructions

A clogged filter is the most common reason foam soap is not properly dispensing. To fix this problem:

1. Open the dispenser pushing the grey button underneath the dispenser and against the wall



2. Remove the bladder being careful not to spill the soap




3. Using a screwdriver or flat tool, slowly pop of the cap. Be careful not to lose the filter as you do.



4. Remove and replace the filter or clean the screen using warm water and a small brush, if necessary.



5. Reinsert the filter and cap, making sure the cap firmly snaps in place.

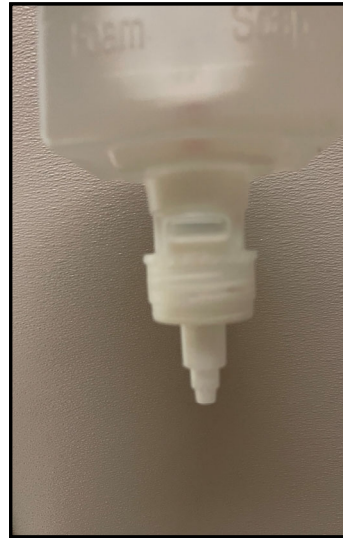

6. Reinsert the bladder



7. Close the cover and pump it until foam soap is supplied. Repeat steps if necessary.



If these steps do not remedy the issue, please notify your technician or contact our office.
Please let us know the exact location of the dispensers.

Office@em-utah.com

(385) 645-6383